



Boumatic Gascoigne Melotte.



XP ACR.

USER CHART



To go Milking.

Change Milk / Wash Switch to Milking Position.(Vac. Pump on.)

Clusters will lift up into Standby Position.(Cluster Hanging from ACR Rope.)

Lift Cluster,ACR gives you Cluster with Vacuum.(Attach to Cow)

*Or 1 Press to **Green Button** gives you Cluster with Vacuum.(Attach to Cow)*

*1 press to **Black Button**while on Cow = Manual Mode.*

*1 press to **Black Button** again while on Cow = Back to Automatic Mode.*

*Long press to **Black Button** (3 seconds) while on Cow = Manual Take Off.*

To go Washing.

Cluster in Standby Position.(Cluster Hanging from ACR Rope.)

*Long press (3 seconds) on **Black Button** Will let down cluster with no Vacuum.*

Clusters can now be placed in Jettors.(this can be done while the last few cows are milking on the other units.)

Place all Clusters in Jettors.

*Change Milk / Wash Switch to Washing Position.
(Clusters will Start suction ready for Washing.)*

Always Leave Milk/Wash Switch in Wash when not Milking.

