



USERS CHART

BOUMATIC GMi+

Gascoigne Melotte Milk Yield Indicator

Milk/Wash Mode:

Is changed with Milk/Wash Switch
Or if using Aquastar changes automatically

Milking Mode:

Zero appears on display and A.C.R.'s lift up clusters.
If time display is on it flashes 00.00 -> 0
A.C.R. light is on – **RHS**

To Go Milking:

Lift Cluster or
Press Start button (Start/Stop)
A.C.R. light goes off (**RHS**)
After 90 seconds (initial A.C.R Display) light **LHS** starts blinking until
Cow is finished milking, cluster comes off automatically.
Milk amount will be added up on display box.

To leave on the cow (Manual Mode) press the + button while on the cow.
Then to take off cow press Stop button
To take off cow early press Stop button.

To go to Dumpline:

- (1) Lift cluster close milcline valve and open dumpline valve and press the + button (Manual Mode)
To take off press (Stop/Start) button.
Close Dump Valve and open Milk Valve for next cow.
- (2) Press and hold (Stop/Start) button for 4 seconds. This lets down cluster with no vacuum, and then opens Dumpline Valve.
PrCL will show up on display. When cow is finished close Dumpline Valve and press (Stop/Start) button.

To go Washing:

Press (Stop/Start) button for 4 seconds.
Cluster will drop with no vacuum. **PrCL** (Preclean) appears on display.

Cluster can now be placed on jettors.
Cluster finished milking can be placed in Jettors while last few cows are milking.

When all cluster are in jettors:

- (1) Change Milk/Wash Switch to wash position
Or
- (2) Aquastar press Stop will change to wash position
CLn appears on Display Box.

Valves shut down after 30-45 minutes after washing.
If doing a wash in the middle of the day, change to milk position and back to wash position first. (If there is no automatic washer)